
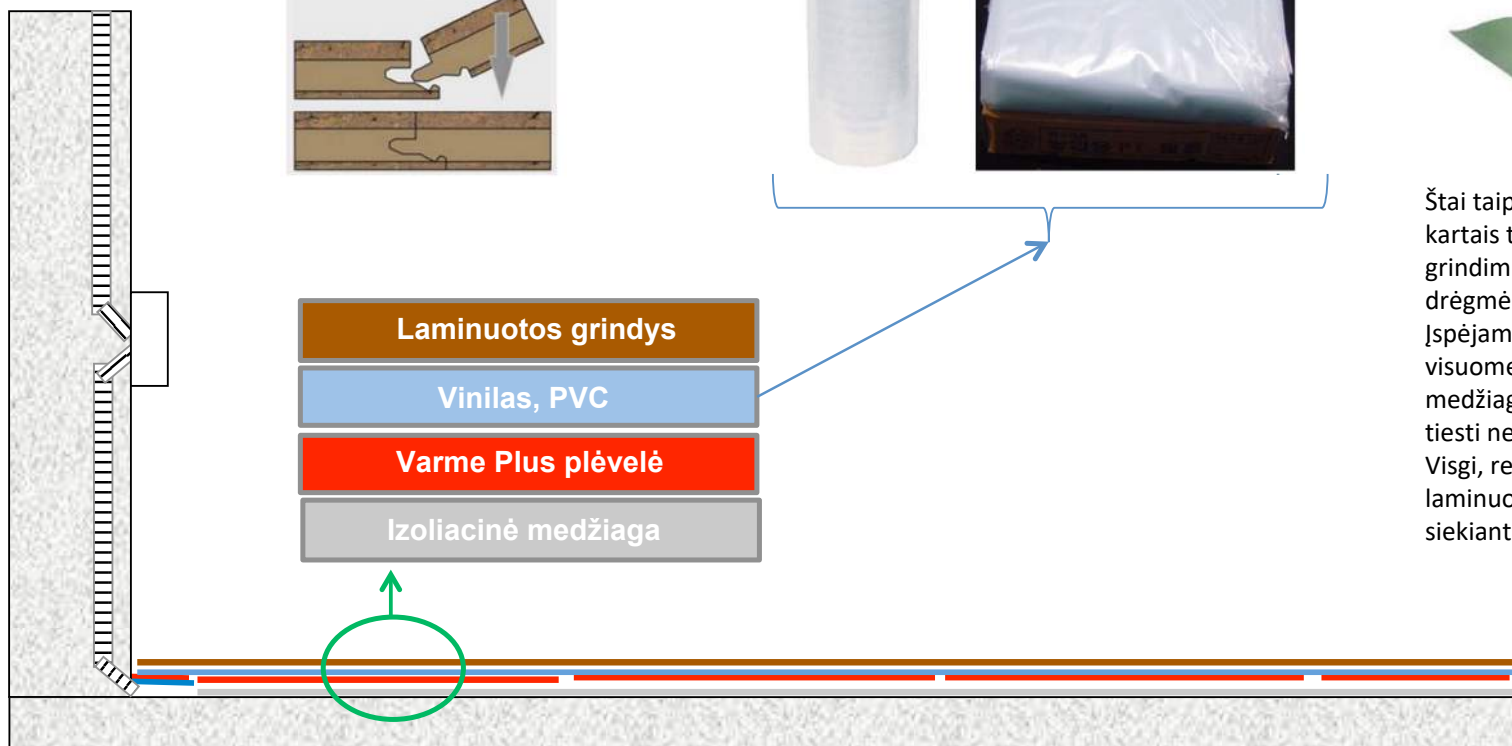


Varme Plus plėvelės montavimo schema (priklausomai nuo grindų dangos)

Laminuotos grindys
(su Click jungimo sistema)

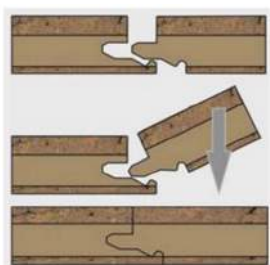

Štai taip atrodo izoliacinis patiesalas, kartais tiesiamas po laminuotomis grindimis, siekiant jas apsaugoti nuo drėgmės poveikio.

Įspėjame, kad po Varme Plus plėvele visuomet yra tiesiama speciali izoliacinė medžiaga, todėl papildomos izoliacijos tiesti nebereikia.



Visgi, rekomenduojame tarp plėvelės bei laminuotų grindų tiesti vinilo (PVC) dangą, siekiant apsaugoti nuo vandens žalos.




*Apsauginis sluoksnis

Visos medžiagos, kurios lengvai montuojasi, galimos klijuoti, taip pat, kurios nesiplečia bei nesitraukia šilumos metu, yra tinkamos naudoti.

Rekomenduojame naudoti PE (polietileno) plokštes.

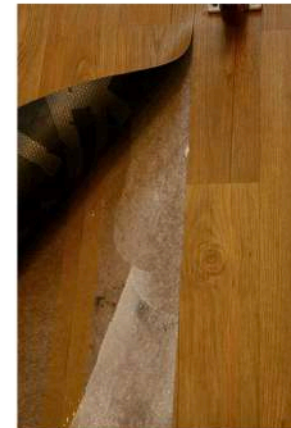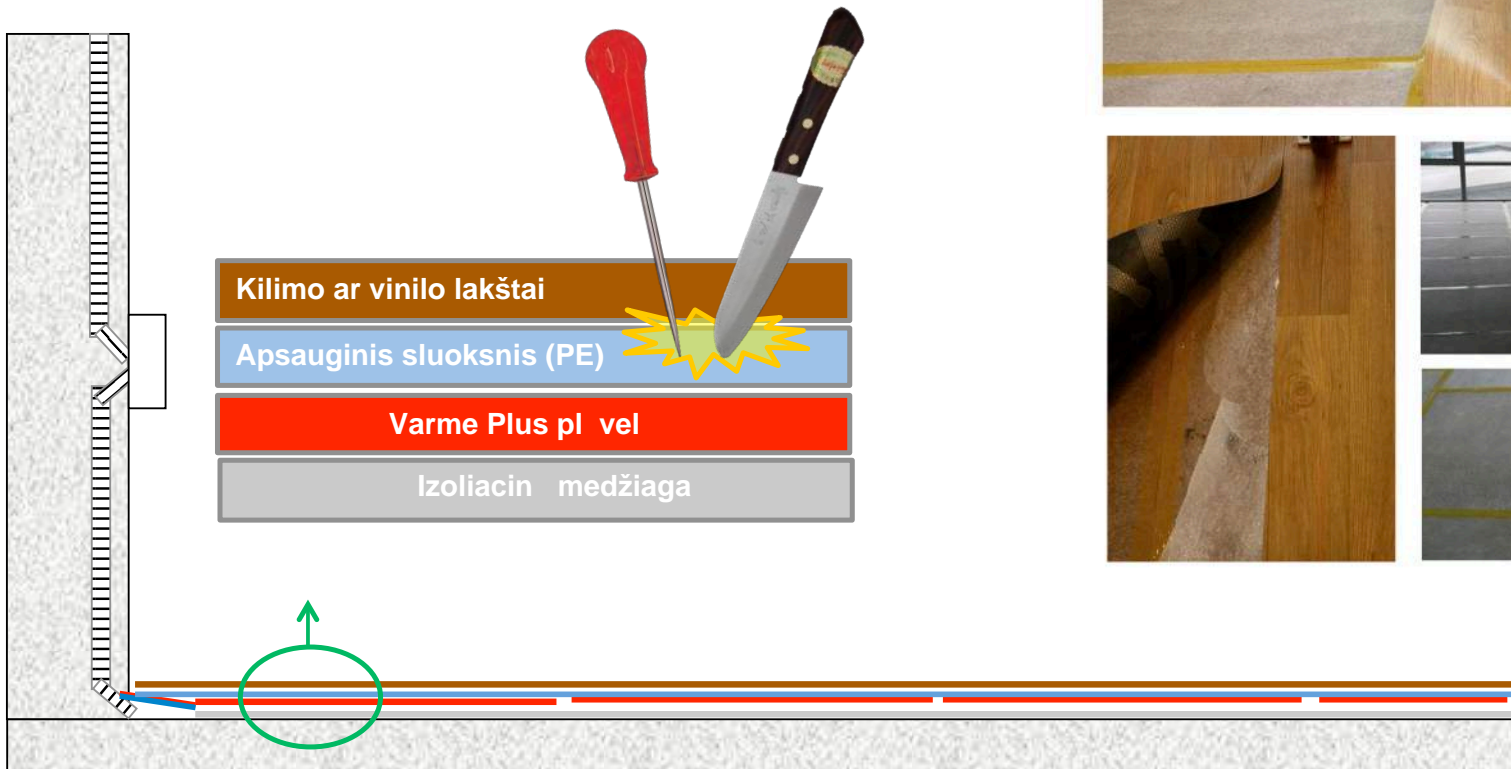

◆ Ceramic, Marble, or Tile (Plastering type)

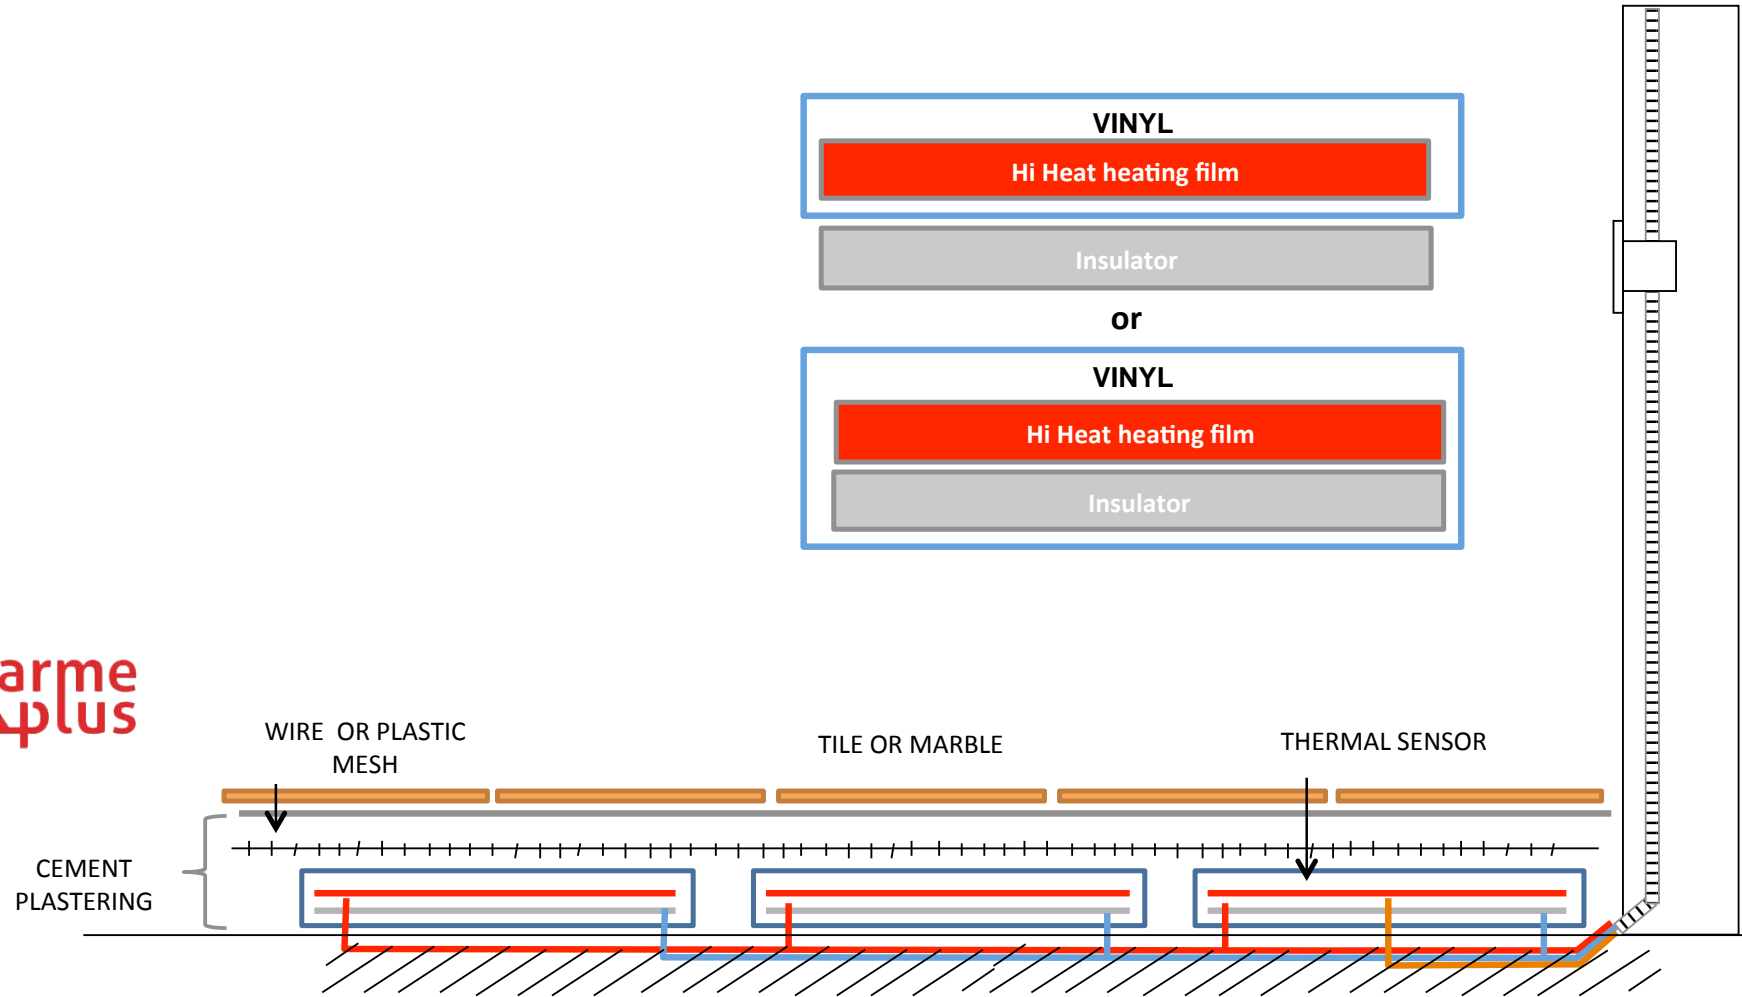

◆ Wall (Dry Sauna or other uses)


Installing on the wall is one of the most difficult installation. You need to discuss with the person who will work after you. Of course, there are many methods to install with covering.

Case 1.


Step 1. Installing Hi Heat

Step 2. Installing Protection Board


Step 3. Covering

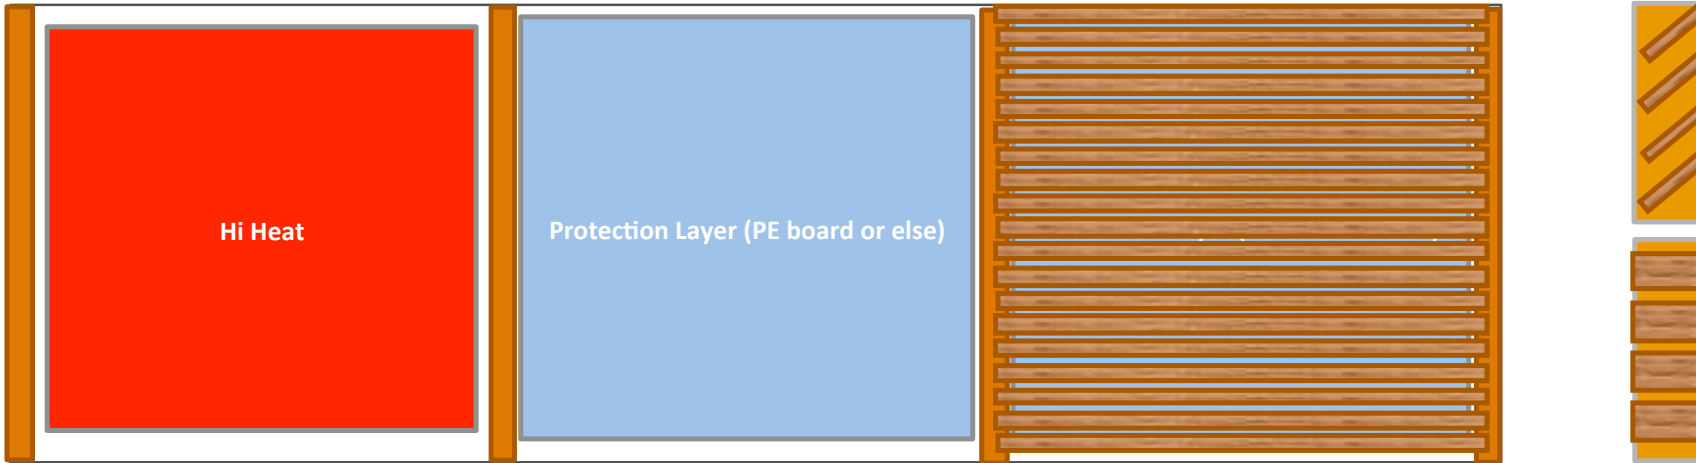

Case 2.

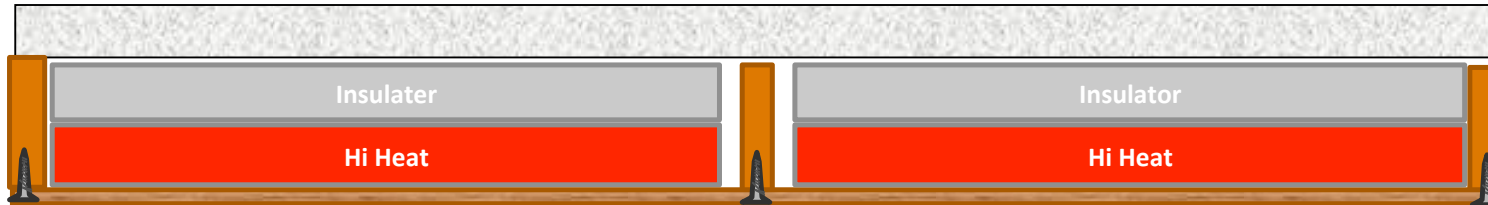


Case 3.

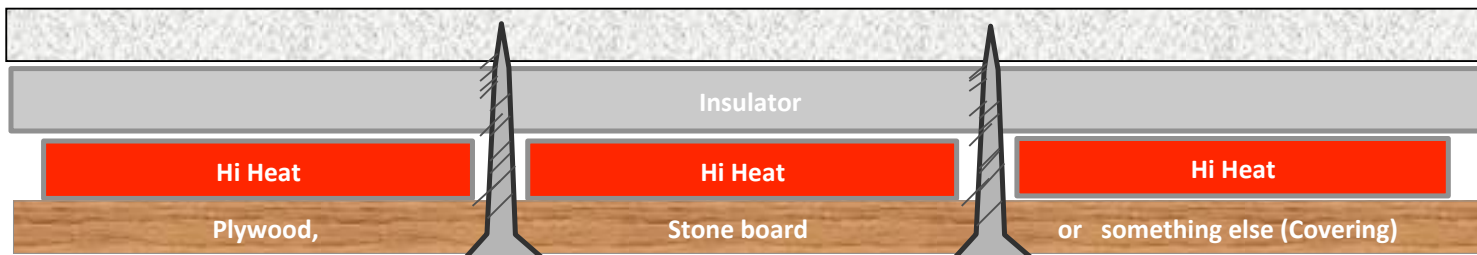



Covering : Solid Hardwood

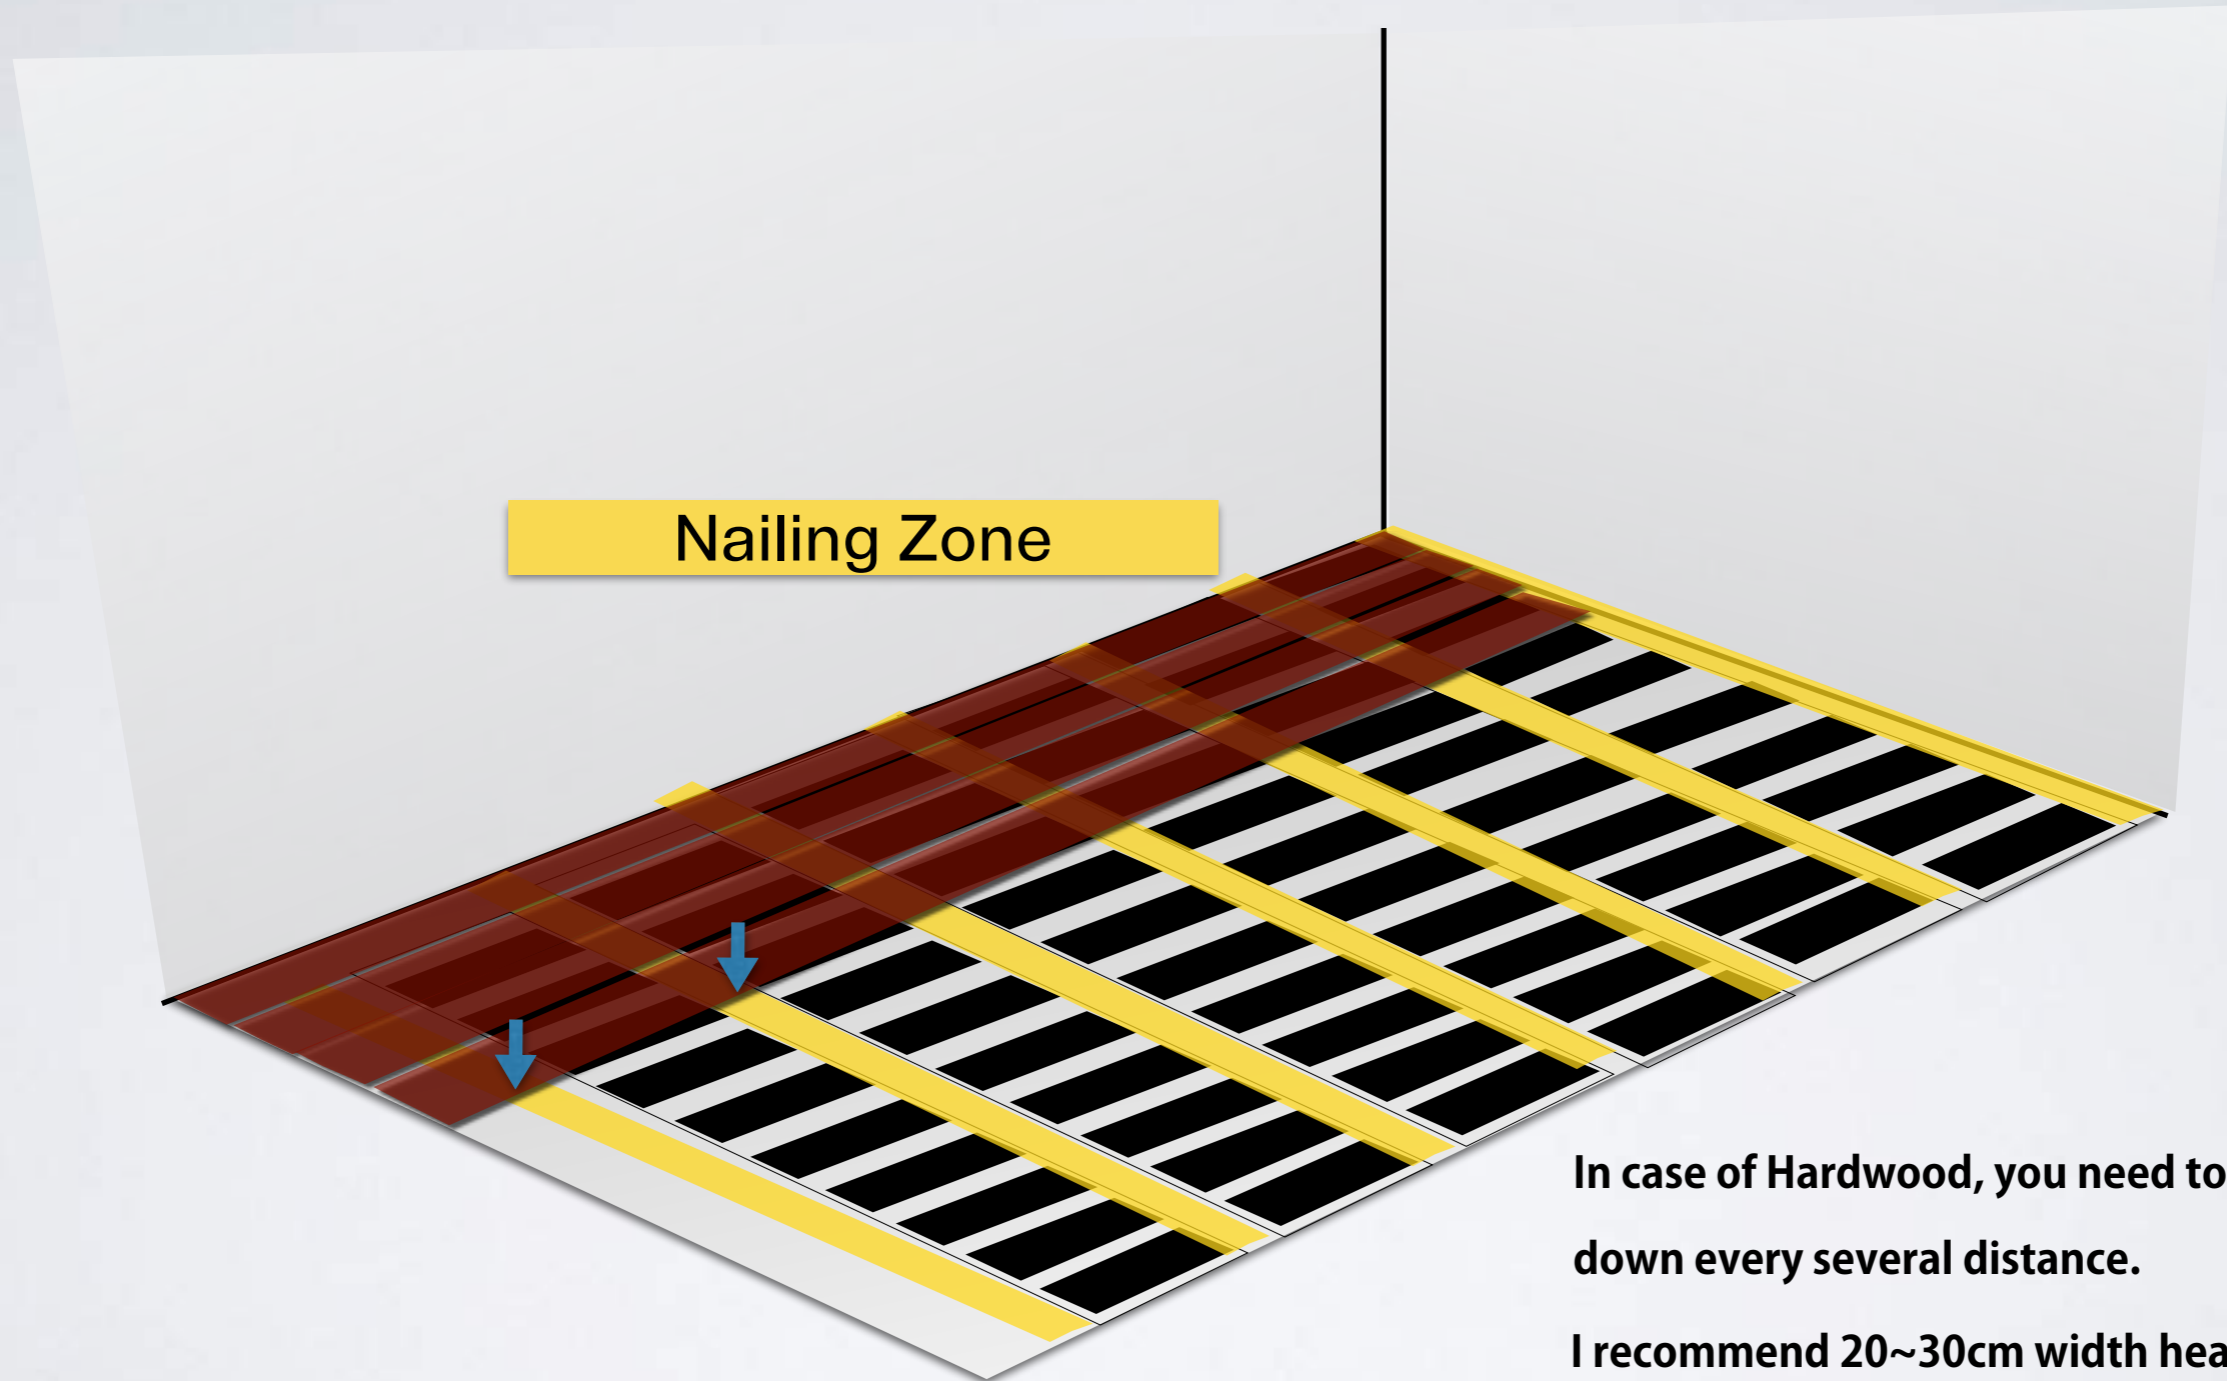

In case of Hardwood, you need to nail down every several distance.

I recommend 20~30cm width heating films and nail between sheets (Nail Zone)